



TONE WINNER

AT-1200 User Manual

ISO9001 Quality Management System Certified Enterprise



Product packing list

Number	Item	Quantity
1	Manual	1 pcs
2	Power line	1 pcs
3	Certificate of qualification	1 pcs
4	Remote control	1 pcs
5	HDMI cable(4K)	1pcs

Pollution Control Sign and Content Description

The symbol indicates that the product can be reused. The figure indicates the term of service of environmental protection. The product will not cause environmental pollution or affect human body and property within the term of service expressed by the figure since the date of manufacture as long as the safety and operating precautions on the product are obeyed.



Name and Content of Toxic or Harmful Substance or Element in the Product

Name of Parts	Toxic or Harmful Substance or Element					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr)6+	Polybrominated (PBB)	Biphenyls polyphenyls (PBDE)
Body/Box	○	○	○	○	○	○
Equipped Baseplate/ Electrical Part	×	○	○	○	○	○
Plastic Structural Member	○	○	○	○	○	○
Metallic Structural Member	○	○	○	×	○	○
Cable	○	○	○	○	○	○
Transformer	○	○	○	○	○	○
Transformer Loudspeaker/ Microphone	×	○	○	×	○	○

Marks:

“○” means the content of the hazardous toxic substance is lower than SJ/T11363-2006 standard required.

“×” means in a homogeneous material of the component the content of the hazardous toxic substance is higher than SJ/T11363-2006 standard required.



Note: “×” as there are no substitutable substances under the existing technology

Thank you for using our audio products. With the philosophy of “high technology, high quality and high taste”, we make products with durable materials, exquisite technique, rigorous circuit & advanced technology and offer professional service!

Contents

Safety Warnings and Protective Measures-----	2
Main Features-----	4
Front Panel-----	5
Front Display Screen-----	6
Rear Panel-----	7
Remote Control-----	9
Connecting Instruction-----	11
Basic Settings-----	13
Function and Settings -----	14
Mobile Phone Bluetooth Wireless Transmission-----	16
Mobile Phone App-----	17
Specification-----	18
Equipment Safety Standard-----	18
Problem Shooting-----	19

Safety Warnings and Protective Measures

	WARNING ELECTRIC DANGER DO NOT OPEN		To reduce risk of electric shock, do not remove the outer cover (or rear panel). For maintenance, it should be carried out by qualified maintenance people. To avoid fire and electric shock hazards, do not get the unit wet or damp. Equipment safety standard : Class II
---	---	---	--

- 1 Read the protective measures: read all warning messages about protection and operation in the instructions carefully before using the equipment.
- 2 Follow instructions: please follow the instructions and do not violate the instructions.
- 3 Place the product on where manufacturer recommends: to avoid overturning, do not push too hard or suddenly stop when moving.
- 4 Keep away from water and moisture: do not place equipment near water such as bathtub, basin, sink, washing machine, etc. Do not use equipment at high temperatures or high humidity environment, such as a damp basement.
- 5 Cleaning: do not use liquid or mist cleaners. Please use dry cloth to clean. Turn off the machine and power off before cleaning the equipment.
- 6 Power supply: use the power supply according to marks and tags. Connect and place the wires properly. Do not step on wires to avoid damage. Pay special attention to wires to plugs, receptacles and connecting ports.
- 7 Ventilation: the cabinet of equipment is designed with venting holes. To ensure reliable performance, please avoid overheating and do not cover the equipment. Do not use the equipment on beds, sofas, carpets etc.
Newspapers, tablecloths, curtains, and other objects may block venting holes. Do not put the equipment close to window curtains. If it is put in devices such as bookcase and rack, please pay attention to the ventilation and cooling. Keep a distance of 10cm (4") on left, right, top and rear sides. Equipment bracket or rear of top cover should have a distance of 10 cm (4 ") to rear panel or the wall, to keep venting space.
- 8 Keep away from heat: do not put that machine near heat sources, such as radiators, stoves and other objects that generate heat (including power amplifiers).
- 9 Prevent unknown objects or liquids - objects or liquids should be prevented from falling through the holes into the equipment, because it might contact with current or live parts that might cause fire or electric shock. Do not place the equipment in rain or water splashing place. Do not put water containers such as vases on top of it.
- 10 Please connect well all input/output wires before switching on.
- 11 Thunder and lightning: unplug the power cable in thunder and lightning weather because it can effectively prevent lightning impulses to protect the equipment.
- 12 Protections: unplug the machine when you do not use it for long period. Good grounding can prevent the machine from being damaged.

- 13 Maintenance: do not open the cabinet without professional instruction to avoid electric shock. Contact with the product managers where you buy this machine in the following cases:
- a) Unknown parts or liquid enter the machine.
 - b) The machine is soaked.
 - c) The machine works abnormally.
 - d) Machine falling or damage.

14 Battery: for environment protection, please dispose batteries in appropriate ways.

15 Disconnection device of main power supply: this machine uses power plug and coupler as the disconnecting devices. Power plug and coupler should be easily operated.

16 This product is only suitable for safe use in altitude below 2000m.




17 This product is not suitable to be used in tropical climates.



Main Features

- 1 Support Atmos audio format decoding.
- 2 Support HDMI2.0, HDCP2.2.
- 3 Support 4K/60Hz, RGB4:4:4, 18GHz bandwidth HD video signal.
- 4 Support HDR 10 video signal.
- 5 Support two top-channel speaker outputs.
- 6 Built-in digital Bluetooth audio receiver.
- 7 Built-in music playing device; support multi-level folder arrangement of music files from TF card & USB disk; support lossless & compressed audio formats including FLAC, APE, WAV, MP3, etc.
- 8 Support smart phone App control.
- 9 Support speaker configurations from 2.0 to 5.1.2.
- 10 HDMI 4 in 1 out, 4 way analog inputs, 1 way coaxial input and 1 way optical input.
- 11 5 channel speaker out, 100 watts (6Ω, RMS) per channel.
- 12 Support RS232 protocol.
- 13 Support HDMI ARC and CEC Consumer Electronics Control.
- 14 Support 7 band parameters EQ for each channel.

Front Panel

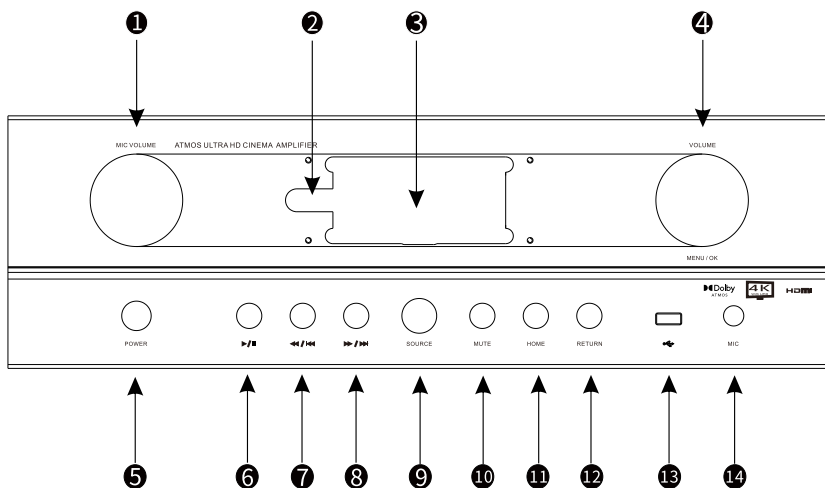

1 MIC VOLUME knob

Turn the knob to adjust microphone volume.

Turn the knob to select a song when a TF card or USB disk is inserted.

2 Remote control sensor

Receive remote control signals.

3 Display screen

Display the input source, volume and current status.

4 VOLUME/ MENU/ OK knob

(1) Turn the knob to adjust volume when it's on home interface.

(2) Press the knob to enter the menu.

5 POWER button

Turn on/ off the unit.

6 Play/pause button

7 Last/ fast-reverse button

Short press to play the previous song. Long press to make the song fast-backward.

8 Next/ fast-forward button

Short press to play the next song. Long press to make the song fast-forward.

9 SOURCE button

Press the button to select an input source.

10 MUTE button

Mute or unmute the unit.

11 HOME button

Switch between home interface & menu; directly return to home interface.

12 RETURN button


Return to the last step.

13 USB disk port

14 MIC jack

Connect to wired microphone.

Front Display Screen

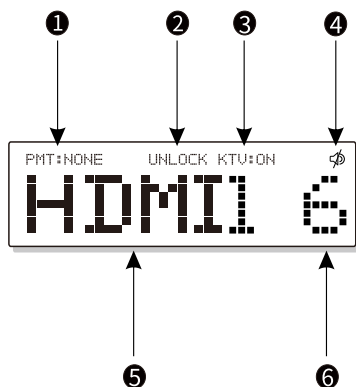

1 Input signal indicator

Indicate the current input signal.

2 LOCK/ UNLOCK indicator

Indicate the unit locked/ unlocked status.

3 KTV ON/ OFF indicator

Indicate the unit Karaoke mode ON/ OFF status.

4 Mute/ unmute indicator

Indicate the unit mute/ unmute status.


5 Input source indicator

Indicate the current input source.

6 Volume indicator

Indicate the current volume.

Rear Panel

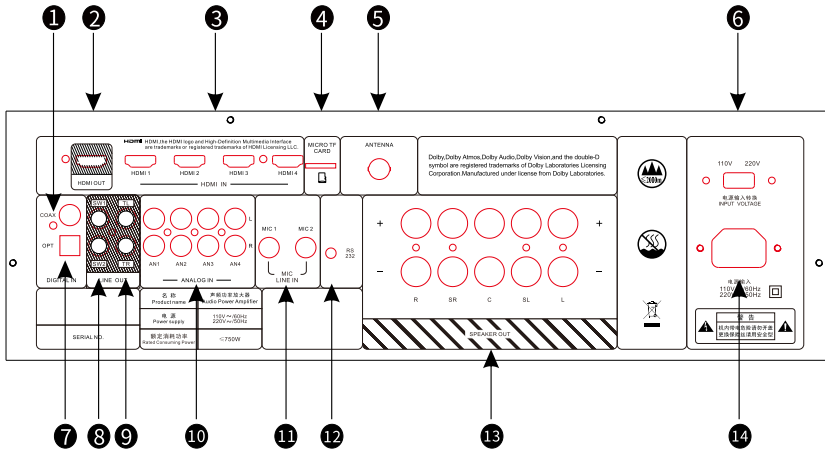

1 Coaxial input jack

2 HDMI OUT jack

The HDMI ARC jack is for devices with ARC.

3 HDMI IN jacks

4 way HDMI inputs for connecting to an HDMI-compatible devices.

Better first choose HDMI1, HDMI2 & HDMI3 jacks.

4 MICRO TF CARD port

For TF card input.

5 Bluetooth ANTENNAS

6 VOLTAGE Selector

Slide from edge: 220V-230V

Slide to edge: 110V-115V

Select the switch position according to your local voltage.

The voltage showed on the red switch is the selected voltage.

7 Optical input jack

8 Subwoofer output jacks

9 TL/SBL, TR/SBR decoding output jacks

Top left/left back surround, top right/right back surround decoding outputs.

10 ANALOG IN jacks

4 way analog inputs AN1, AN2, AN3, An4.

11 MIC IN jacks

2 way wireless microphone inputs MIC1, MIC2.

12 RS232 port

For remotely controlling the unit.

13 SPEAKERS OUT terminals


5 channel speaker outputs.

14 Power jack

First make sure you select the appropriate voltage on Ⓒ VOLTAGE Selector.

Then connect to the mains electricity according to you local voltage.


Remote Control

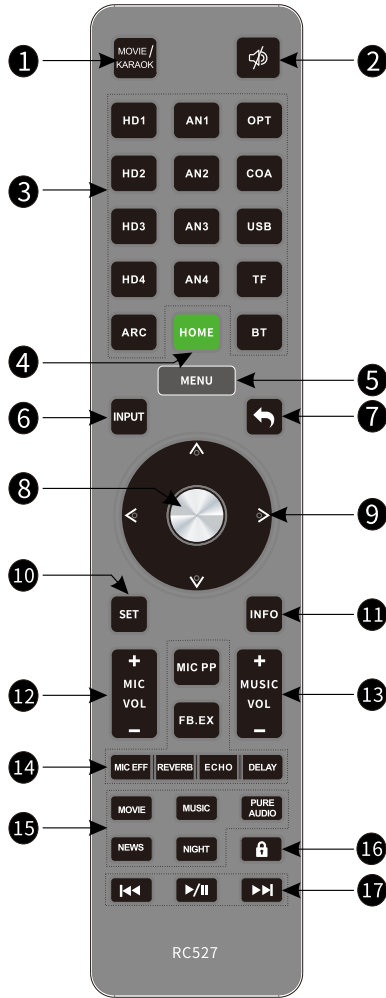

- 1 MOVIE/KARAOKE button**
Select movie/Karaoke mode.
- 2 Mute button**
Mute or unmute the audio.
- 3 Input source selection buttons**
Select an input source.

- 4 HOME button**
Press to directly return to home interface.
- 5 MENU button**
Operate the menu.
- 6 INPUT source selection button**
Roll-select an input source.
- 7 Return button**
Return to the last step.
- 8 OK button**
Confirm the selection or operation during menu setting.
The same function as pressing VOLUME/ MENU/ OK knob.
- 9 ▲, ▼, ◀, ▶ direction buttons**
Switch during the menu operation.
- 10 SET button**
Display the setting options.
- 11 INFO button**
Display the information of this unit.
- 12 MIC VOL +/- button**
Adjust the microphone volume only in Karaoke mode.
- 13 MUSIC VOL +/- button**
Adjust the music volume of the unit.
- 14 Microphone effect selection buttons**
Press MIC PP button to select a microphone mode among 3 personal modes and 20 factory modes by pressing the MIC VOL +/- button. Press FB.EX button to adjust the feedback extend parameter to deal with a howling microphone, etc.
- 15 Audio mode selection buttons**
Select from movie/music/news/night/pure modes.
- 16 Lock button**
Long press for 5s to lock or unlock the unit.
- 17 Music playback operation buttons**
Previous fast-backward/play pause/next fast-forward buttons.
Only works when the unit is reading a USB disk or TF card.

Connecting Instruction

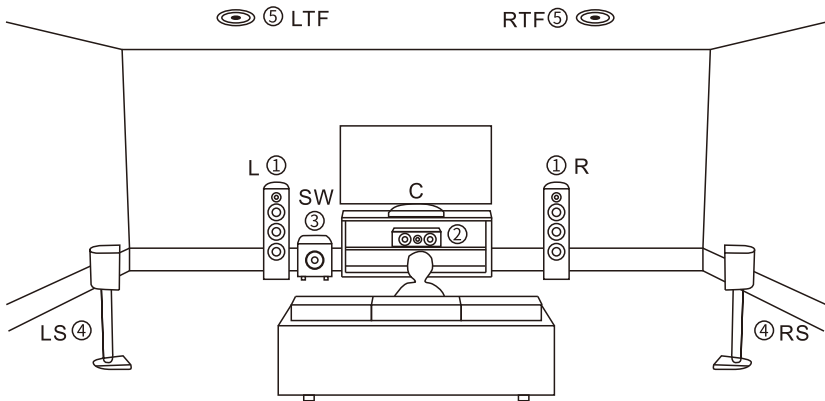

5.1.2 Speaker Layout Diagram

You can use the 5.1.2 system diagram above as a reference to arrange your speakers.

① Left and right speakers

Front left and right speakers can create the overall soundstage. Place the speakers in front of the user at ear-listening level. Toe-in the speakers inwards and create an equilateral triangle between the user and the two speakers so that they meet to a point that goes behind the user. Then adjust the angle to find the position where the audio has better soundstage and imaging.

② Center speaker

The center speaker produces most of the dialogue and vocals and reinforces the sound effect of front left and right speakers. Place the center speaker under or above the display device and make sure it faces to the user at ear-listening level or at the same level as the front left and right speakers.

③ Subwoofer

The subwoofer adds emotion and impact, and handles the bass in the sound field. The sound quality and volume of the subwoofer are closely related to the shape of your audio room and the listening position. In general, place the subwoofer in the front corner, or the one-third width of the room, or anywhere you feel the best sound.


④ Left and right surround speakers

These speakers are used for precise positioning of sounds and to bring spatial sound effect from all directions. Place these speakers on the sides or slightly backward sides of the user at the height of about 60cm to 100cm above user's ears. The same distance between the speaker and the user brings ideal sound quality.

⑤ Left and right top front speakers

Add another layer to create 3D sound effect which transports you with breakthrough, spatial and realistic audio experience and brings you a deeper connection to music and images.

Theater system connecting diagram

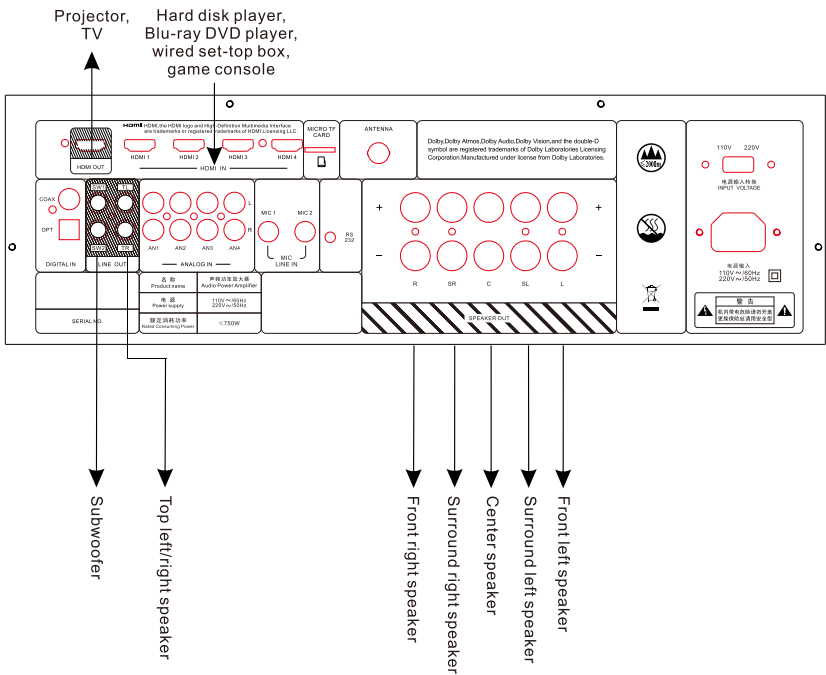

Basic Settings (First-time Install and Settings)

Front Panel Buttons/Knobs Instruction:

Press the right VOLUME/MENU/OK knob to enter the menu.

Turn the left MIC VOLUME knob to roll-scan the menu options.

Press the right knob to enter the next layer.

Press the right knob to circle one option and turn the right knob to make change.

Press the right knob again to cancel the circle.

Press the RETURN button to return to the last step.

1 Select a language

Remote control: MENU→Options→Language.

Front panel: HOME→press the right knob→Options→Language.

2 Select an input source

Remote control: HD1/HD2/HD3/HD4/ARC/AN1/AN2/AN3/AN4/OPT/COA/USB/TF/BT buttons.

Front panel: press the SOURCE button to roll-select an input source.

3 Speaker configuration

Remote control: MENU→Speaker→Speaker layout.

Front panel: HOME→press the right knob→Speaker→Speaker layout.

You can select 2.1/2.1.2/3.1/3.1.2/4.1/4.1.2/5.1/5.1.2/7.1.



4 Subwoofer ON/OFF

Remote control: MENU→Speaker→Subwoofer.

Front panel: HOME→press the right knob→Speaker→Subwoofer.



Function and Settings

1 INPUT SOURCE: Menu→InSource

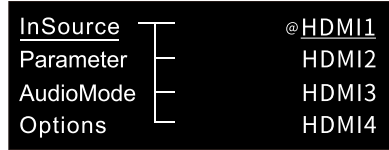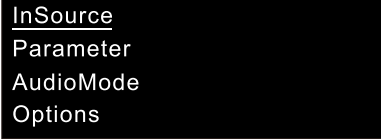

It offers input sources and displays the audio-video input port.

2 Parameter adjustment: Menu→Parameter

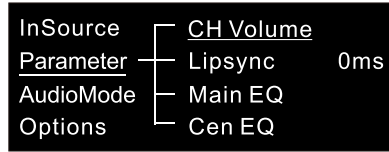
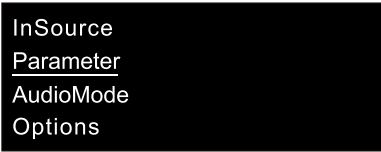


It offers channel volume, lipsync and channel EQ.

Adjust the gain, frequency and type in the EQ adjust.



Filter type/ shape: bypass, peak, high shelf, low shelf.

3 AudioMode: Menu→AudioMode

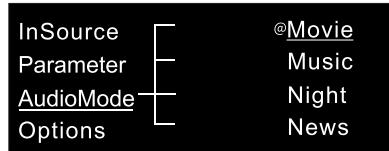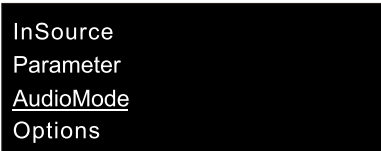

Five audio modes: movie, music, night, news and pure modes.

4 Options: Menu→Options

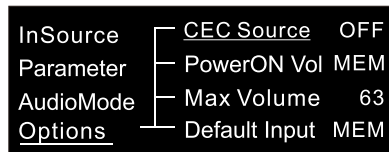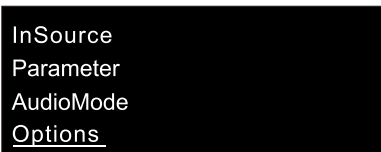

It offers setting options including CEC control, power-on volume, max volume, default input source, factory default and language. You can select ON, OFF or MEMORY and adjust the parameter.

5 **Speaker:** Menu→Speaker

Options
Speaker
Ktv Setup
About

Options — Speaker layout 5.1
Speaker — Subwoofer ON
Ktv Setup — Crossover
About

It offers options including speaker layout, subwoofer and frequency crossover adjustment.
Speaker layout: 2.1/2.1.2/3.1/3.1.2/4.1/4.1.2/5.1/5.1.2/7.1.

Subwoofer ON/OFF.

Crossover adjustment: L/R high pass frequency, center high pass frequency, subwoofer low pass frequency, surround high pass frequency, top/back surround high pass frequency.

6 **Ktv Setup:** Menu→Ktv Setup

Options
Speaker
Ktv Setup
About

Options — Karaoke ON
Speaker — Vol Setting
Ktv Setup — CH Volume
About — Mic Parameter

It offers Karaoke, volume setting, channel volume, microphone parameter, EQ adjust, microphone mode, save and reset.

Karaoke: ON/OFF (Turn ON and then adjust the parameter below)

Volume setting: microphone volume, power-on volume, microphone max volume.

Channel volume: microphone center/subwoofer/surround left surround right volume.

Microphone parameter: shift frequency, effect volume, delay, phase, echo volume, reverb volume.

EQ adjust: bass, middle bass, middle, middle treble, setting.

EQ adjust→setting: EQ band, gain, Q, frequency.

Microphone mode: 20 factory modes, 3 personal modes.

Save: P01, P02, P03 to adjust and save.

Reset: Yes is to reset the KTV setup.


7 **About:** Menu→About

Options
Speaker
Ktv Setup
About


Options | Atmos Audio System
Speaker | MCU:1.05
Ktv Setup | A113D:1.03
About | Update

Mobile Phone Bluetooth Wireless Transmission

- (1) Press SOURCE button on the front panel or remote control to select BT.
- (2) Switch on Bluetooth on your mobile phone, search & pair-connect with AT-1200, and control music playback on your mobile phone.

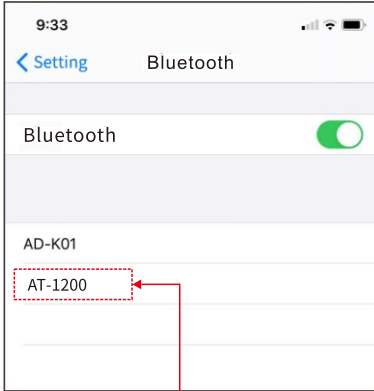

Press to connect

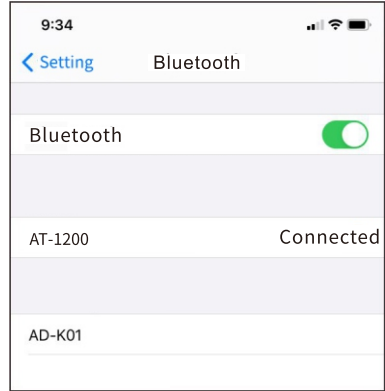

Mobile Phone App

For better user experience, ToneWinner has developed its own App to match its products, and you can finish all above operations and switches on your mobile phone. For the first time to use ToneWinner App, please follow step 1, 2 and 3. Later you just need to follow step 4.


- (1) Keep your phone on normal working status and with internet access.
- (2) Go to <http://www.tonewinner.net/> to download the ToneWinner Music App and install it.

For IOS system, search "ToneWinner Music" on App store to download and install.

- (3) Enter the App, search AT-1200, and connect to it.
- (4) To set the App language into English, follow the four steps:




1. Click ≡ on top left

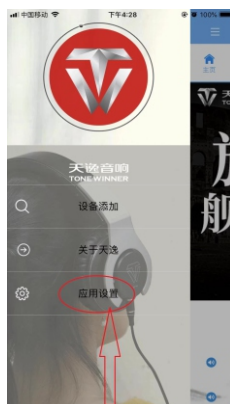

2. Click "应用设置" Setting



3. Select language

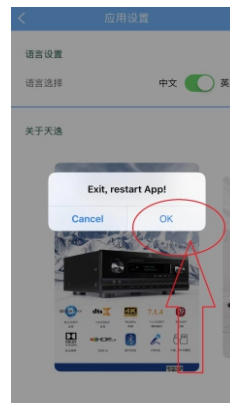

4. Click **OK** and the App will auto-restart.

- (5) For more App details, please check on our websites.

Specification

Model: AT-1200

Rated impedance: 6Ω

Rated power output: 5 channels, 100W Rms/6 Ω (THD≤1%, one channel, 1kHz, pure mode)

Distortion: ≤0.05% (A-weighted, pure mode, 1kHz)

Frequency response: 20Hz-30kHz (+1/-3dB)

Gain: ≥40dB

S/N: ≥95dB (A-weighted)

Power: AC ~110V/60Hz or ~220V/50Hz

Net weight: 9.1kg

Gross weight: 11kg

Unit size: 430×351×149mm(W×D×H)

Package size: 546×436×230mm(W×D×H)

Executive standard: GB8898-2011, GB/T9254.1-2021, GB17625.1-2012

(Note: The specification may be changed slightly without further notice.)

Equipment Safety Standard: Class II

- 1 Please read the manual and safety precautions carefully before using.
- 2 The product should be mounted somewhere ventilated and dry for the convenience of heat dissipation to avoid moisture and lampblack.
- 3 The safety standard of the machine is Class II; upon installation, the power plug should be connected to 110-115V~/60Hz or 220-230V~/50Hz grid.
- 4 Do not remove the cover during using to prevent electrocution.
- 5 Do not frequently turn it on or off. Wait a few minutes before turning it on again.
- 6 When the equipment fails, contact with the product managers where you buy this machine for internal maintenance. To avoid accident, do not open the rear cover for inspection or repair.
- 7 The plugs, power lines, fuses, power switch, and transformer used on the equipment are all safety parts. Upon change of safety parts, the maintenance department should replace them in accordance with the model and specification specified by our company.

Problem Shooting

If a problem should arise, first check the following:

- Are the connections correct?
- Is the unit being operated as described in the user manual?
- Are the other devices operating properly?

If this unit does not operate properly, check the corresponding symptoms in this section. If the symptoms do not match, disconnect the power immediately and contact the dealer or store where you purchased this unit.

Problem	Solution
Display screen does not bright with AC power.	1 Disconnect the unit immediately; 2 Check if power socket has electricity; 3 After above two steps, turn it on again.
Remote control is insensitive or does not work.	1 Check if IR remote control sensor is blocked; 2 Change weak batteries.
The unit, display screen & inputs work normally, but there is no output.	1 Check if all cables are connected well; 2 Check if amplifier works normally; 3 Check if volume is too low;
No sound or weak sound from microphone.	1 Check if mic volume is too low; 2 Check if mic plugs in; 3 Check if mic is broken.
Howling microphone or noise.	1 Mic is too close to speaker; 2 Mic Volume is too high; 3 Mic Parameter does not match; 4 Mic does not plug well; 5 Mic treble is too much.



Scan QR code

Guangzhou Tonewinner Electronics Co., Ltd

Tel.: 86-020-34797660/34796146

Web: <http://www.tonewinner.com>

Alibaba Web: <https://gztonewinner.en.alibaba.com/>

Address: NO.1, Hongsheng 3rd Road, Dashi Street,
Panyu District, Guangzhou, 511430, China